



A2-F WEIR ADJUSTMENT INSTRUCTIONS

Top close-up view of the adjustable top showing the GPM settings and showing set screw. Image 2 is the inside view of the top showing an alignment mark on the A2-F weir base that is used to set the desired GPM, in case alignment mark cannot be seen, use the centerline of the set screw as a guide.

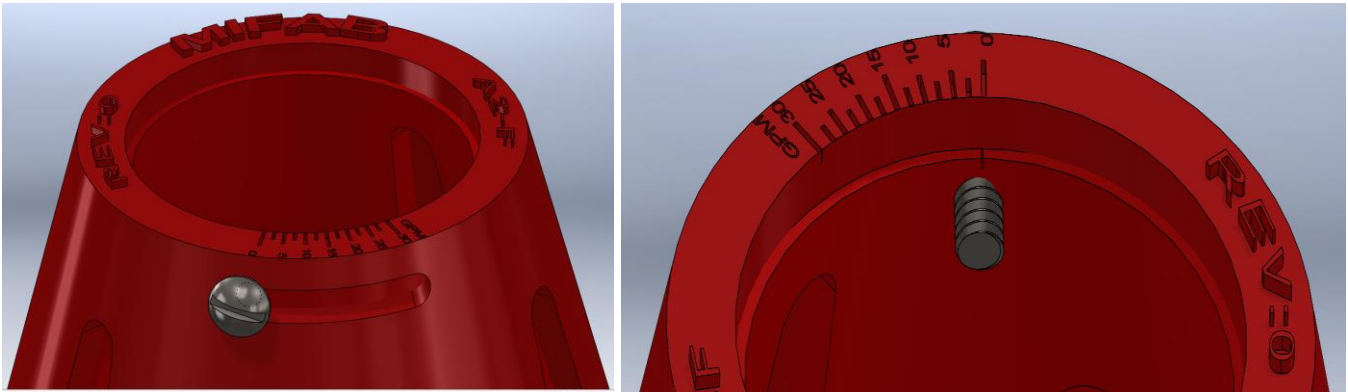

When the GPM settings and alignment mark are not visible then the installer will need to measure the distance between the outer edge slot of the Adjustable Top to the opposite edge of slot on the Weir Base.

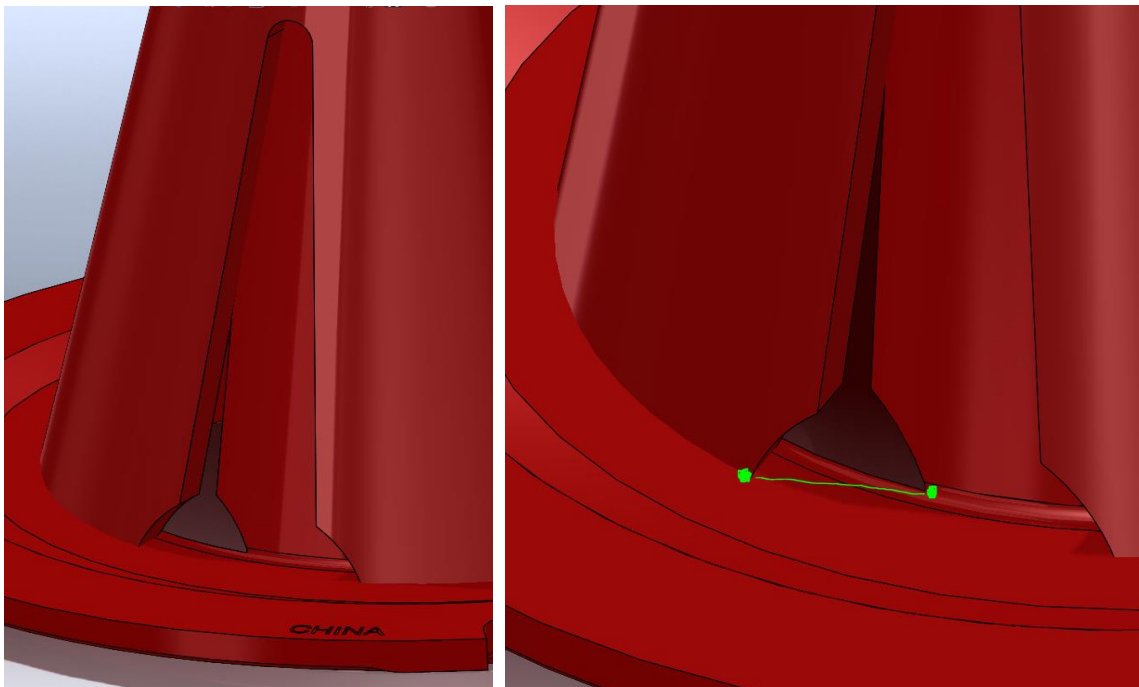

A2-F WEIR ADJUSTMENTS							
GPM	0	5	10	15	20	25	30
Distance (in.)	0	0.46	0.65	0.93	1.20	1.50	1.73