


How to change from 5-1 solid drain to adjustable Top Set by using the Retrofit Top Set Kit




1 Remove the 5-1 strainer (keep the screws.)



2 Remove the strainer of RTS5-1 (keep the screws.)



3 Separate the Shank Ring from the Collar of RTS5-1. Alternatively unscrew the three set screws, few turns at time.

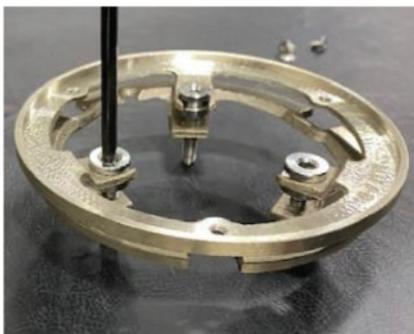

- 4 Assemble RTS5-1 shank ring on 5-1 Shank. Then align the 3 shank ring notches to the 3 tapped holes of 5-1 shank; secure shank ring in place with the 3 short set screws saved from 5-1. For JR SMITH and ZURN shanks use the provided washers to assemble the ring.



- 5 Attached the RTS5-1 collar to shank ring, align the 3 large set screws to designated shank ring tapped holes. Alternatively tighten the set screws, few turns at a time.



- 6 Attach the RTS5-1 strainer to shank ring. Then align the 3 peripheric chamfered holes with the peripheric small tapped screws of the shank ring. Secure the strainer in place by using the 3 small set screws.



- 7 Adjust the top set to desired height, by using the 3 large top set screws

